

## Quick Installation Guide

AC1200 Wi-Fi Range Extender AR-E400

Airpho Technology Co.,Ltd  
Web: www.airpho.com

### Package Content

- 1 x WiFi Range Extender AR-E400
- 1 x Ethernet Cable



### LED Explanations

Status	Color	Indication
On	Green	The Extender is connected to the router, and signal reception is strong.
	Orange	The Extender is connected to the router, but signal reception is weak.
	Red	There is no active connection.
Blinking	Red	WPS connection is in progress. Or the Extender is initializing.
Off	--	The Extender is off.

### METHOD ONE


#### Quick Setup using the WPS Button.

If your router doesn't have a WPS button, or you are not sure, please use METHOD TWO.

#### 1 Power on the Extender


Plug the Extender into an electrical outlet next to your router.

Wait about 1 minute until the LED is lit in solid red.

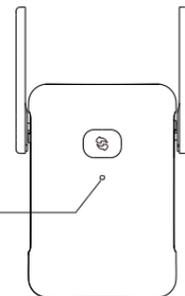


### 2 Connect to the Extender's network

2.1. Press the WPS button on your router.

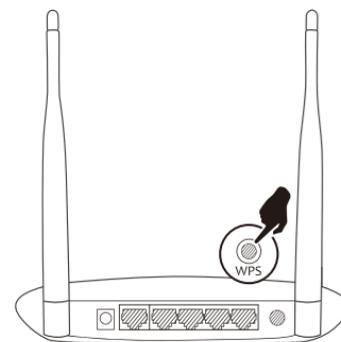


2.2. Press the WPS button on your Extender within 1 minute.

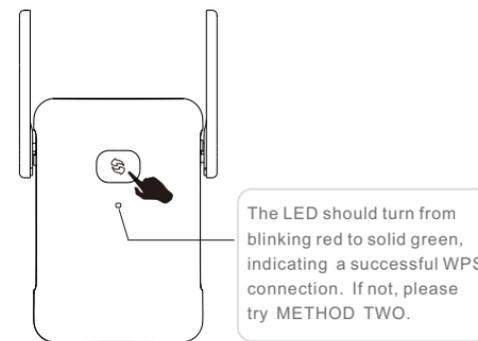

### 3 Relocate the Extender

3.1. Plug in the Extender into an electrical outlet halfway between your router and the Wi-Fi dead zone. You need to make sure the location you choose is within the range of your host network.


3.2. Wait about 1 minute until the LED is lit and solid green. If not, relocate it closer to the router to achieve better signal quality.

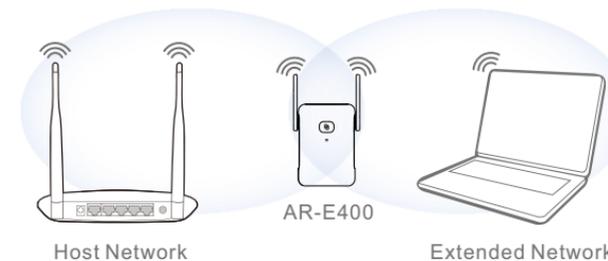

## ▶ METHOD TWO

### 1 Power on the Extender

Plug the Extender into an electrical outlet next to your router.

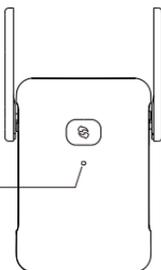

Wait about 1 minute until the LED is lit with a solid red.

### 2 Connect to the Extender's network

For Computer Users

Disconnect any wired connection from your computer .

Click the Wi-Fi icon on the taskbar and connect to the Extender's network (e.g. AIRPHO\_2.4G\_XXXX / AIRPHO\_5G\_XXXX).



For Mobile Device Users

Go to Wi-Fi setting of your mobile device, and connect to the Extender's network (e.g. AIRPHO\_2.4G\_XXXX / AIRPHO\_5G\_XXXX)




### 3 Configure the Range Extender

3.1. Launch a web browser and enter [www.airphoextender.net](http://www.airphoextender.net) in the address field. You will be guided to the Extender Setup Page.




3.2. Create a new password to log in the web management page, then click **Start**.

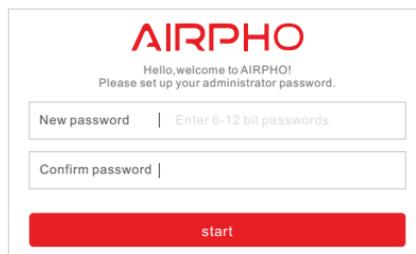

3.3. Select the network you are ready to extend, a 2.4G or a 5G WiFi network, then click **Next**.

**Note:** You can choose either a 2.4G network or a 5G network to extend, or you can extend both networks at the same time.

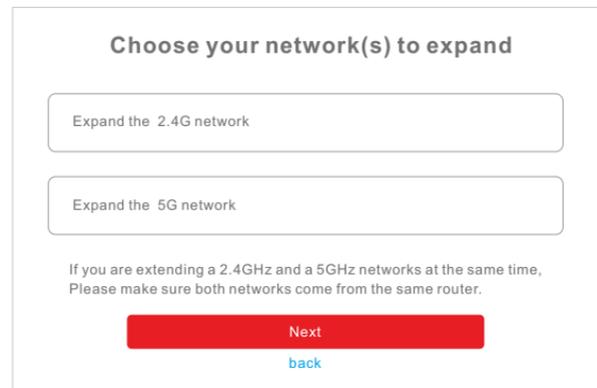

3.4. Extend your network(s)



Select your router's 2.4GHz or 5GHz network from the list and enter its wireless password ,then click **Confirm**.

3.5. Customize your SSID

You can either keep the default SSID or customize it for the extended network, then click **Confirm**.

3.6. Confirm your settings


Verify your wireless settings, then click **Next** and **Confirm**. It will take about 15 seconds to proceed. Once finished, your LED indicator should lit in solid green or solid orange, indicating a successful connection.

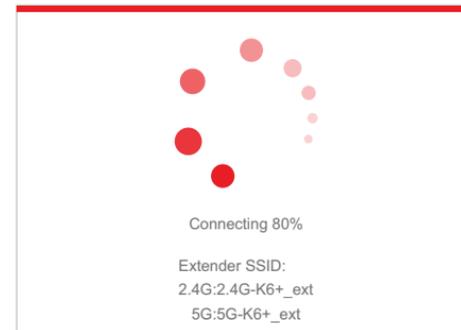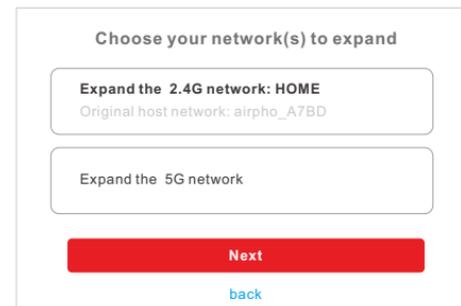

### 4 Relocate the Extender

Relocate the Extender to a proper place (halfway between your router and the WiFi dead zone is suggested). You may check the signal quality by looking at the LED indicator.

(Please refer to ▶ **LED Explanations** on the other side).

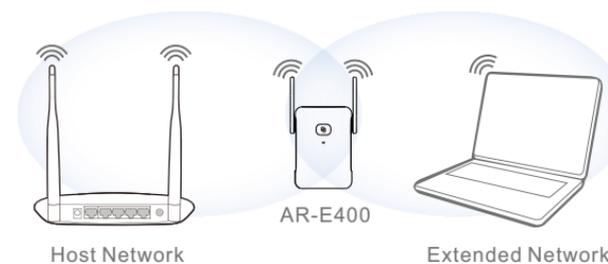

## Support

If the Extender does not connect to the Internet, you may refer to the User Manual and FAQ, which are available on Airpho official website: [www.airpho.com](http://www.airpho.com)